

ATWATER KENT

Instructions for Model-20-Compact


Part No. 7960

NOTE ON INSERTING TUBES WITH UX OR CX BASES:

These tubes each have two thick and two thin prongs, which must be fitted into the large and small holes which form the tube sockets in the receiving set.

Facing the front or dial side of the set, insert tubes in sockets 1 and 2 by turning the tubes so that the little brass pins (protruding from the sides of their bases) point to the BACK of the set. To insert tubes in sockets 3, 4 and 5, turn the tubes so that pins point towards the LEFT side of receiving set.

When prongs are in their proper holes, press down on tube until base rests firmly on socket plate.

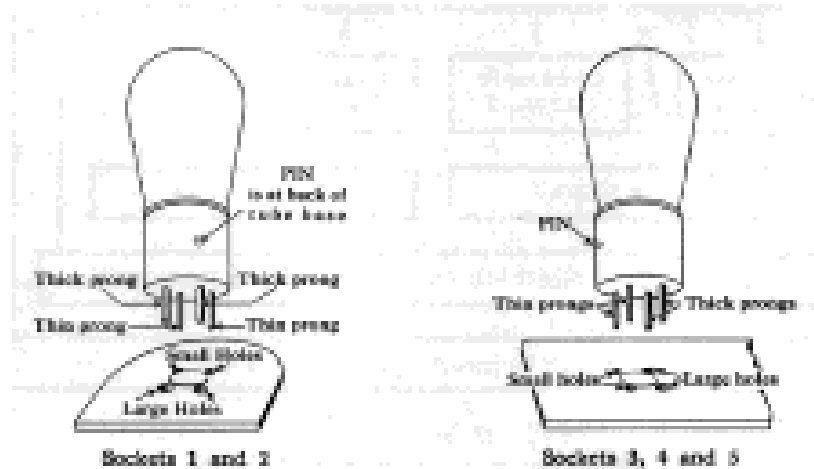

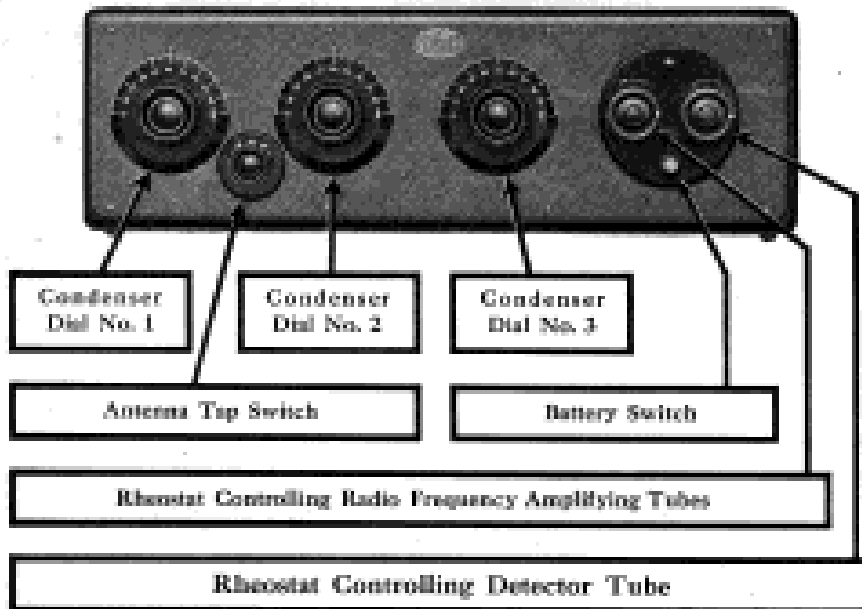
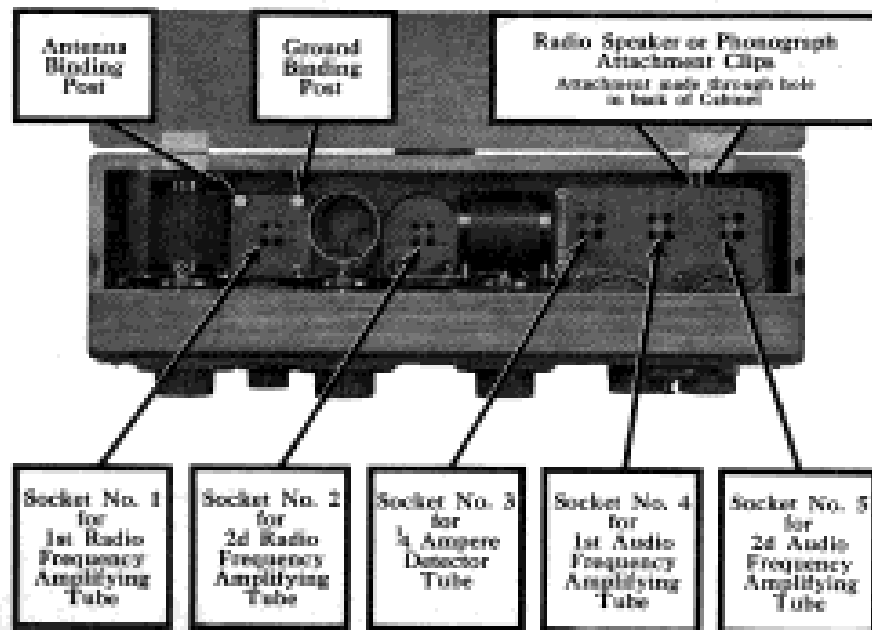


Illustration 28
LOCATION OF CONTROLS, ETC., MODEL 20 COMPACT